

OCEANIC®

INNOVATION FIRST

AIR XS II OWNER'S GUIDE


THANK YOU for purchasing an Oceanic AIR XS II Regulator/Inflator system. With this system, you have -

- 2 methods to inflate the BC
- 2 methods to deflate the BC
- automatic venting of excess BC pressure
- an Alternate Air Source Regulator

Be sure to read and understand the instructions in this Owner's Guide describing how the AIR XS II System operates before attempting to dive with it.

.....

COMPONENTS

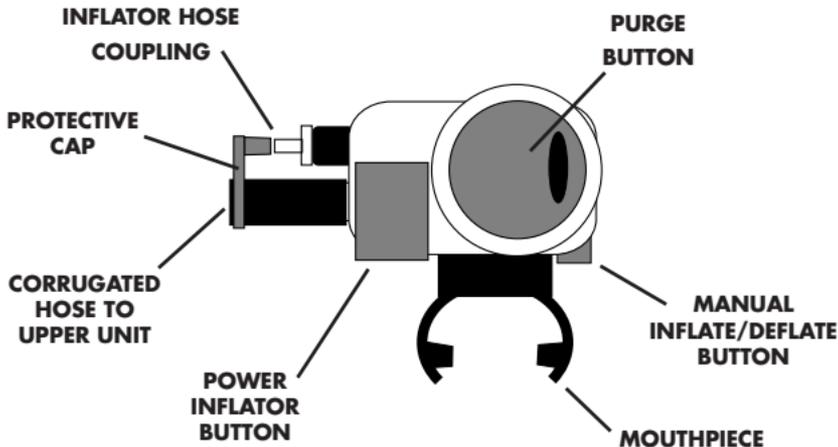

CONTENTS

COMPONENTS.....	2
WARRANTY, NOTICES	4
COMPATIBILITY AND INSTALLATION.....	5
FEATURES	5
INFLATOR OPERATION.....	6
REGULATOR OPERATION	8
CARE AND MAINTENANCE	9
GUIDELINE FOR MINIMUM SERVICE INTERVALS	12
COLD WATER DIVING	13
OCEANIC WORLD WIDE.....	14
RECORDS.....	15

LIMITED TWO-YEAR WARRANTY

Refer to the Warranty Registration form provided by your Authorized Oceanic Dealer or register on-line at:

www.OceanicWorldwide.com

COPYRIGHT NOTICE

This Owner's Guide is copyrighted, all rights are reserved. It may not, in whole or in part, be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine readable form without prior consent in writing from Oceanic / 2002 Design.

Oceanic AIR XS II Owner's Guide
Doc. No. 12-2116
© 2002 Design, 1998
San Leandro, CA USA

When using Air with this regulator equipment, the Air used must meet EN132 Annex A standards.

The AIR XS II Regulator/Inflator System' is designed for -

- minimum working pressures of 120 PSI (8.3 BAR)
- nominal working pressures of 140 PSI (9.5 BAR)
- maximum working pressures of 160 PSI (11 BAR)

COMPATIBILITY AND INSTALLATION

The AIR XS II low pressure inflator hose is compatible with all Oceanic first stage regulators. It may not be compatible with other manufacturers' first stages (thread size = 3/8-24 UNF).

Have your AIR XS II installed on your BC, and the low pressure inflator hose attached to your regulator first stage, by an Authorized Oceanic Dealer.

Connect the quick disconnect (QD) end of the inflator hose to the AIR XS II using the QD coupling. To attach it, grasp the coupling on the end of the inflator hose between the palm of your hand and fingers, and pull back the coupling release with your thumb and forefinger.

While holding back the coupling release, press it onto the quick release fitting on the AIR XS II, and let go of the coupling release while continuing to hold the hose onto the quick release fitting.

Ensure they are firmly attached prior to pressurizing the regulator/inflator system.



NOTE: Refer to the illustration on page 2 for identification of components.

FEATURES

OPERATING BUTTONS

The three operating buttons, one located on each side of the mouthpiece and one above the mouthpiece, can be differentiated by look, position, and tactile feel. Become familiar with their use to minimize the possibility of confusion.

- Top - regulator purge button
- Left - power inflator button
- Right - manual inflator/deflator button

CORRUGATED HOSES/PULL CONNECTOR

Two corrugated hoses are joined by a Pull Connector. By pulling on the rounded Pull Connector you can operate the Rapid Exhaust Valve located in the upper (shoulder) unit while you are using the AIR XS II Regulator without having to remove the Regulator from your mouth. The extended length of the Hose Assembly prevents any resistance during head movement.

INFLATOR OVERPRESSURE RELIEF VALVE (OPV)

The integrated OPV, located in the upper (shoulder) unit, automatically vents excess pressure from the BC during ascent or if over pressurized with the Power Inflator. This component of the AIR XS II operates automatically so no instructions for its use are necessary.

 **WARNING: The OPV integrated into the upper (shoulder) unit is set to operate at a lower relief pressure than the OPV located on the back of the BC to prevent damage to the material of the BC air cell. It is imperative that only Oceanic inflator assemblies be used with Oceanic BCs.**

QUICK DISCONNECT CAP (SEE ILLUSTRATION ON PAGE 2)

The rubber Cap secured to the corrugated hose is provided to cover the quick release inlet fitting of the AIR XS II Power Inflator Assembly. The Cap must be installed any time the Inflator Hose is disconnected to prevent entry of contaminants.

INFLATOR OPERATION

 **WARNING: If you ever hear air, or see bubbles, escaping from the area around any of the AIR XS II's connectors, or if the BC fails to hold air, immediately terminate or postpone the dive until the BC and AIR XS II can be serviced by an Authorized Oceanic Dealer. You must not dive with an AIR XS II or BC that exhibits any signs or symptoms of leakage.**

BC INFLATION USING THE POWER INFLATOR

With your Regulator connected to an appropriate cylinder, slowly open the cylinder valve to pressurize the Regulator/Inflator system. Press the Power Inflator Button, located on the left side of the AIR XS II Mouthpiece, until you hear air flowing into the BC. Minor compressions of the Power Inflator Button will initiate airflow into the BC and allow small adjustments in buoyancy.



WARNING: If you depress the Power Inflator Button fully, the BC will inflate rapidly. Be careful not to overinflate the BC during a dive causing an unwanted rapid rise toward the surface.

Test the Power Inflator and Overpressure Relief Valve (OPV) prior to each dive to ensure they are functioning properly. Depress the Power Inflator until the BC fills completely, forcing the OPV in the upper (shoulder) unit to open. You will hear the sound of air venting from OPV, indicating that it is working properly. While the BC is still inflated, listen for any undesired air leakage around the AIR XS II. The BC should stay inflated until you deflate it manually.

BC DEFLATION USING THE RAPID EXHAUST VALVE (REV)

The Rapid Exhaust Valve (REV) is located inside the upper (shoulder) unit of the Inflator Assembly. It is connected to the lower (power) unit by two Cables located inside the Corrugated Hose and coupled together inside the Pull Connector.

The REV is operated by grasping the Pull Connector, or the lower (power) unit and pulling it down (away) from the upper (shoulder) unit. The Cables pull the Exhaust Valve open, venting air from the BC through the Vents of the upper unit of the Inflator Assembly.

The amount of air vented depends on how far open the Exhaust Valve is, the distance you pull the inner Cable, and how long the Exhaust Valve is open. Short tugs vent small amounts of air for minor changes in buoyancy, and a long pull will vent the entire BC in a matter of seconds.

Use of the REV eliminates water entry even if the Exhaust Valve remains open after all air is vented from the BC.

BC INFLATION USING THE MANUAL INFLATE/DEFLATE BUTTON

The Round Button located on the right side of the Mouthpiece is an Inflate/Deflate manual actuator that allows air flow in to, or out of, the BC. To inflate orally, place the Mouthpiece in your mouth, and after you begin (and continue) to blow in, press the Button with your thumb. This procedure purges the mouthpiece cavity of water, resulting in less water entering the BC, potentially prolonging Bladder life.

Some air may continue to leak in to the surrounding water when you are orally inflating the BC, even after you have released the Inflate/Deflate Button. This is considered normal and will not impede the efficient oral inflation of the BC.

BC DEFLATION USING THE MANUAL INFLATOR/DEFLATOR BUTTON

To deflate the BC through the Mouthpiece, hold the lower (power) unit higher than the top of the BC and depress the Round Button located on the right side of the Mouthpiece to vent the air from the BC.

To ensure complete deflation of the BC, the Mouthpiece must be held higher than the top of the BC. While underwater, you will hear the air as it bubbles out through the Mouthpiece.

To prevent entry of water into the BC, be sure to release the Button before all bubbles stop flowing. To help eliminate unwanted water entry, use the Rapid Exhaust Valve method of deflation.

REGULATOR OPERATION

In the event that it is necessary for you to share air with another diver, you should offer your Primary Second Stage to the diver and you should use the AIR XS II Regulator. Although the AIR XS II Regulator will function properly with the Purge Button facing up or down, Oceanic recommends an operational position with the Purge Button facing up, similar to other Second Stage positioning.

Operation of your AIR XS II Regulator is similar to most other Second Stages. It provides air on demand with low inhalation resistance and it has a convenient Purge Button located on the top of the unit's housing and a comfortable Mouthpiece.

As with most other Second Stages, purging the AIR XS II Regulator of water can be accomplished in two ways. By pressing the Purge Button to initiate the flow of air and expulsion of water, or by exhaling a small puff of air into the Mouthpiece to expel the water.

CARE AND MAINTENANCE

Your AIR XS II is a reliable piece of equipment that will continue to work like new for many years to come, if cared for properly.

Follow the procedures below, and have the entire AIR XS II inspected and serviced annually by your local Authorized Oceanic Dealer.

DISCONNECTING THE INFLATOR HOSE

- Close the Cylinder Valve and purge (vent) the Regulator Assembly 'completely' of all pressure by depressing a second stage Purge Button.
- Grasp the Quick Disconnect Coupling on the AIR XS II Inflator Hose (second stage end) between the palm of your hand and fingers, pull back the Coupling Release with your thumb and forefinger, and pull it off the quick release fitting of the AIR XS II.
- Place the Protective Cap on the fitting (see illustration on page 2) to prevent contaminants from entering the AIR XS II's Valve Housing.

POST DIVE CARE

Any exposure to aquatic elements can produce contamination that could effect the proper function of your dive equipment. Post dive care is the most important thing you can do to keep your AIR XS II in top condition.

 **WARNING: DO NOT attempt to remove (or install) the AIR XS II from (on) a BC. Improper installation may cause misoperation or BC failure underwater, possibly resulting in serious injury or death. It will also void the warranty.**

As soon as possible at the end of each day of diving:

- Flush the exterior of all components thoroughly with fresh water to remove dissolved salt and other contaminants.
- Flush the Lower (Power) Assembly by running water into the Mouthpiece and out the Exhaust Ports. DO NOT depress the Purge Button if the Assembly is connected to the First Stage Regulator, doing so will allow water to flow into the sealed portion of the First Stage.
- If possible, immerse the entire Lower (Power) Assembly in a warm fresh water bath and soak for one hour, preferably while still connected to the First Stage Regulator and pressurized.
- Remove from the bath and rinse all components of the Assembly with slow running fresh water. DO NOT use full water pressure.
- Sand that has collected behind the Lower (Power) unit Cover (behind the Purge Button) can be rinsed out by flushing tap water through the opening in the Cover. Do not pry or lift up on the Purge Button, or use high pressure water that could damage the internal Diaphragm.
- If after thoroughly rinsing, sand or debris can still be heard rattling under the cover, take your BC/AIR XS II Assembly to an Authorized Oceanic Dealer for inspection and cleaning.

 **WARNING: DO NOT remove the Purge Cover yourself. Improper replacement of the Cover could result in an unexpected undesirable shut off of air delivery while underwater.**

- If possible, lay the complete Assembly flat in a cool, dry place (out of direct sunlight) and allow the components to dry naturally.
- DO NOT inject or spray Lubricants into or onto the AIR XS II. Doing so can attract contamination that could subsequently interfere with proper operation.

TRANSPORT AND STORAGE

- If possible, transport your BC and AIR XS II Assembly (preferably dry) in a padded carrying case or equipment bag separated from sharp items (i.e. dive knife, spear gun, etc.) that might damage or scratch the components.
- You should also protect the AIR XS II from damage from heavy objects (i.e., dive light, regulator assemblies, tanks, etc.).
- Prior to storing your AIR XS II, ensure that it is clean and dry.
- If you were unable to clean it prior to transport, or if it became exposed to other equipment that was not clean prior to transport (such as a wet suit), clean it thoroughly and allow it to dry naturally.

SERVICE



WARNING: DO NOT attempt to disassemble or repair any components of the AIR XS II, or to adjust the Regulator. Doing so could cause misoperation while underwater resulting in serious injury or death. It will also void the warranty.

- Once each year, your complete BC/AIR XS II assembly should be inspected and serviced by an Authorized Oceanic Dealer. More frequent service is recommended if you dive in severe conditions or more frequently than an average diver (see Guidelines on page 13).
- In the event that any component of your Regulator assembly requires any form of repair or service, take it to an Authorized Oceanic Dealer for professional service by a trained technician authorized to perform Oceanic factory authorized service.
- Provide the Dealer with a copy of the original sales receipt and your copy of the warranty registration card.
- Inspection/service costs are not covered by the limited warranty.

GUIDELINE FOR MINIMUM SERVICE INTERVALS

Due to variations of use and storage time that the AIR XS II may be subjected to, the Guidelines and defined Intervals given herein are subject to the discretion of the Owner of the equipment. Inspection and/or service indicated must be performed only by an Authorized Oceanic Dealer.

Personally owned equipment used for recreational diving activity:

- Equipment used 100 dives or less per year should be serviced at least once per year.
- Equipment used more than 100 dives per year should be serviced after 100 dives prior to further use.
- Equipment stored for more than 6 months should be inspected, and serviced as required, prior to use.

Equipment used for dive training and/or consumer rental activities:

- Equipment should be inspected prior to every use.
- Equipment should be serviced at least once every 6 months regardless of use.
- Equipment should be serviced after 100 dives prior to further use.
- Equipment stored for more than 3 months should be inspected, and serviced as required, prior to use.

Regardless of ownership or intended use:

- Equipment should be inspected and serviced if it displays any sign of leakage or malfunction.
- Equipment should be inspected and serviced if it displays signs of improper performance or breathing effort.
- Equipment should be inspected and serviced as required if it displays signs of freeflowing.
- Equipment should be inspected and serviced if o-rings or hoses display any signs of deterioration.

COLD WATER DIVING

Specialized training and skills required for cold water diving will reduce effects that cold water Temperatures can impose upon the operation of Oceanic Regulator Second Stage(s).



WARNING: Failure to obtain proper training in the specialized techniques required for diving in cold water environments and failure to apply such techniques to handle situations that could result in Regulator freezing will place you in risk of serious injury or death.

All Oceanic Regulator First Stages are classified as being suitable for use in waters having Temperatures of 50°F (10 °C) and higher.

- Refer to the Regulator Owner's Guide, Doc. No. 12-2018.

OCEANIC WORLD WIDE

OCEANIC USA
2002 Davis Street
San Leandro, CA 94577
Tel: 510/562-0500
Fax: 510/569-5404
Web: www.OceanicWorldwide.com
E-mail: hello@oceanicusa.com

OCEANIC EUROPE
Augsburg, Germany
Tel: +49 (0) 821 810342 0 Fax: +49 (0) 821 810342 29
Web: www.oceanic-eu.com
E-mail: office@oceanic.de

OCEANIC AUSTRALIA
Rosebud, Victoria, Australia
Tel: 61-3-5986-0100 Fax: 61-3-5986-1760
Web: www.OceanicAUS.com.au
E-mail: sales@OceanicAUS.com.au

OCEANIC UK
Devon, United Kingdom
Tel: (44) 1404-891819 Fax: +44 (0) 1404-891909
Web: www.OceanicUK.com
E-mail: helpyou@oceanicuk.com

OCEANIC ASIA PACIFIC
Singapore
Tel: +65-6391-1420 Fax: +65-6297-5424
E-mail: info@oceanicasia.com.sg

OCEANIC HAWAII and MICRONESIA
Kapolei, Hawaii
Tel: 808-682-5488 Fax: 808-682-1068
E-mail: lbell@oceanicusa.com

RECORDS

Serial No. _____

Date of Purchase _____

Oceanic Dealer _____

Dealer Phone No. _____

INSPECTIONS / SERVICE

Date	Service Performed	Authorized Technician

DESIGNED BY OCEANIC CALIFORNIA

2002 Davis Street
San Leandro,
California, 94577
USA

800-435-3483
www.OceanicWorldwide.com

©2002 Design, 1998
Doc. No. 12-2116-r05 (10/21/11)